

Instruction Manual

DCC 9009 Vacuum Cleaner With Powered Floor Nozzle



* Before operating your new Vacuum Cleaner, please read these instructions carefully.

INTRODUCTION

Congratulations on your purchase of your new vacuum cleaner. There are many useful features built into your cleaner and we recommend that you carefully read this instruction book so that you may take best advantage of them.

► *Before you begin*

This product must be operated in accordance with these instructions and used only for domestic cleaning to remove DRY dirt and dust from household carpets, flooring and fabrics.

This cleaner is intended for domestic household use only and is not designed for the collection of vitreous building material including particle board construction products and similar products such as wood/fibres, sand, cement, fillers, fibreglass etc. The pick-up of these materials may be harmful to your cleaner and will void the manufacturers warranty.

► *Safety reminders and taking care of your cleaner*

PLEASE READ THESE INSTRUCTIONS THOROUGHLY. This will ensure you obtain full benefit from your new cleaner. Keep this Instruction Book in a handy place for future reference.

► **IMPORTANT**

Always switch the cleaner off and remove the plug from the electricity supply before cleaning your appliance, when not in use, or attempting any maintenance task. The cleaner must only be connected to an AC supply at the voltage shown on the rating plate. This cleaner should only be used for its intended purpose as described in these instructions.

Never operate the vacuum cleaner without filters.

- DO NOT pick up hard or sharp objects, matches, hot ashes, cigarette ends or similar items.
- DO NOT pick up flammable liquids such as cleaning fluids, petrol etc, or use in the presence of such vapours.
- DO NOT use your cleaner out of doors or on any wet surface or for WET pick-up.
- DO NOT allow children or the infirm to operate this appliance without supervision. It must not be used on people or animals.

► **Caution:** **Supply Cord.**

Always disconnect the cleaner from the power outlet by pulling out the plug directly, NEVER by pulling on the supply cord.

If using an extension cord please make sure that it is of an approved type and that it is fully extended. Failure to do so could cause your cleaner to overheat and damage it.

Refer to the troubleshooting guide on page 7 for further information.

If a fault cannot be rectified, please return to the point of purchase.

INTRODUCTION

► **Caution (cont.)**

Faults.

Do not continue to use this appliance if it appears to be faulty or the supply cord is damaged. If damaged, return the cleaner for repair by an authorised Service Centre in order to avoid a safety hazard.

Consult the trouble shooting guide in this manual if your vacuum cleaner fails to operate properly. Contact an authorised service agent if the problem persists.

► **After use.**

Switch the cleaner off and remove the plug from the electricity supply. Always switch off and remove the plug before attaching any accessories or cleaning the appliance.

Protecting the environment

When you have unpacked the unit, do not simply throw the packing into the household waste.


Take them to an appropriate collecting point for the recycling.

Model: DCC9009
120V 60Hz 1400W
Model: PB11
120V 60Hz 12Amps




Due to continual development in improving product some parts may vary from illustrations

IDENTIFICATION OF PARTS

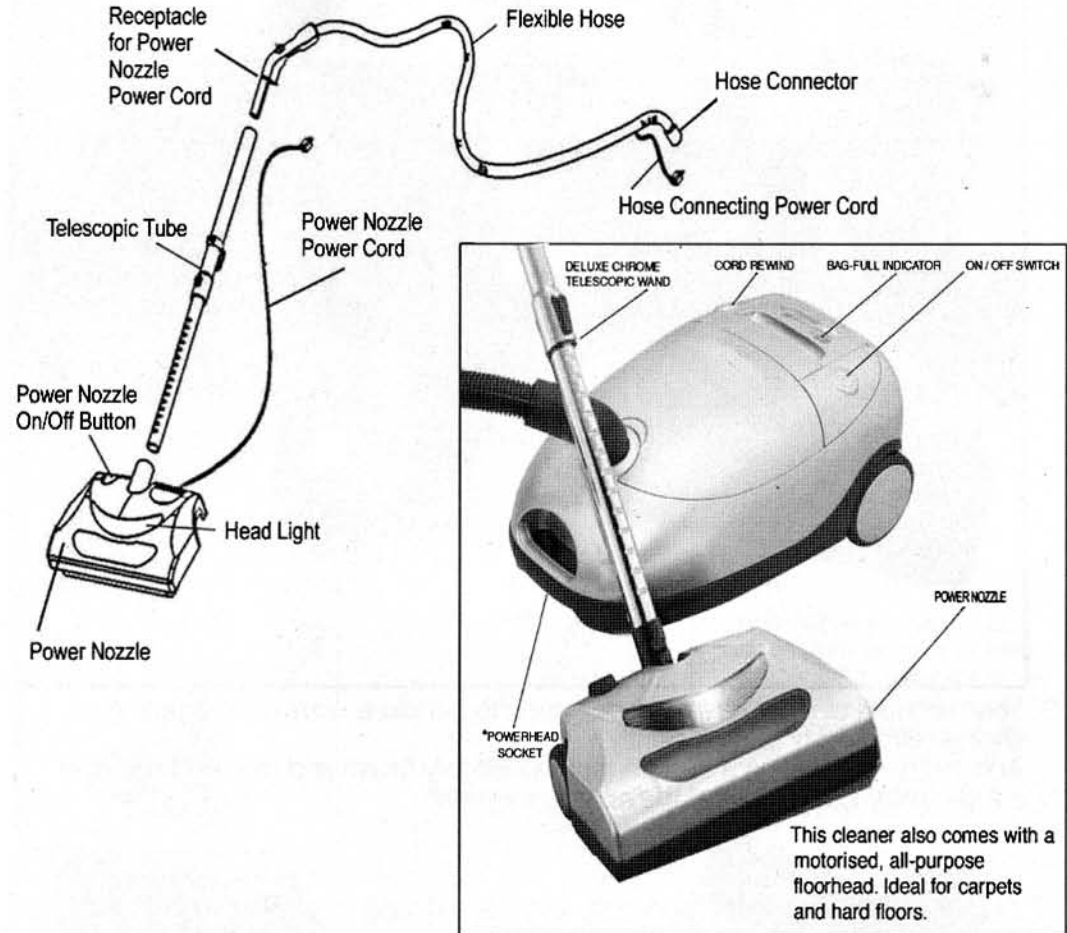


*When connecting the PowerNozzle to the PowerNozzle socket, please make sure the cleaner is turned off and disconnected from the mains.

Suction can be varied to suit different situations using the control mounted on the body.

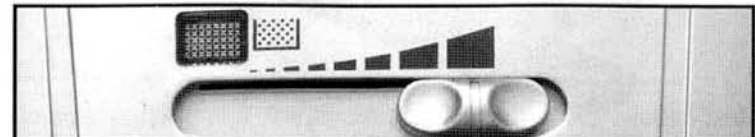

MIN = For delicate fabrics, like curtains. **MAX** = For hard floors and heavily soiled carpets.

ACCESSORIES

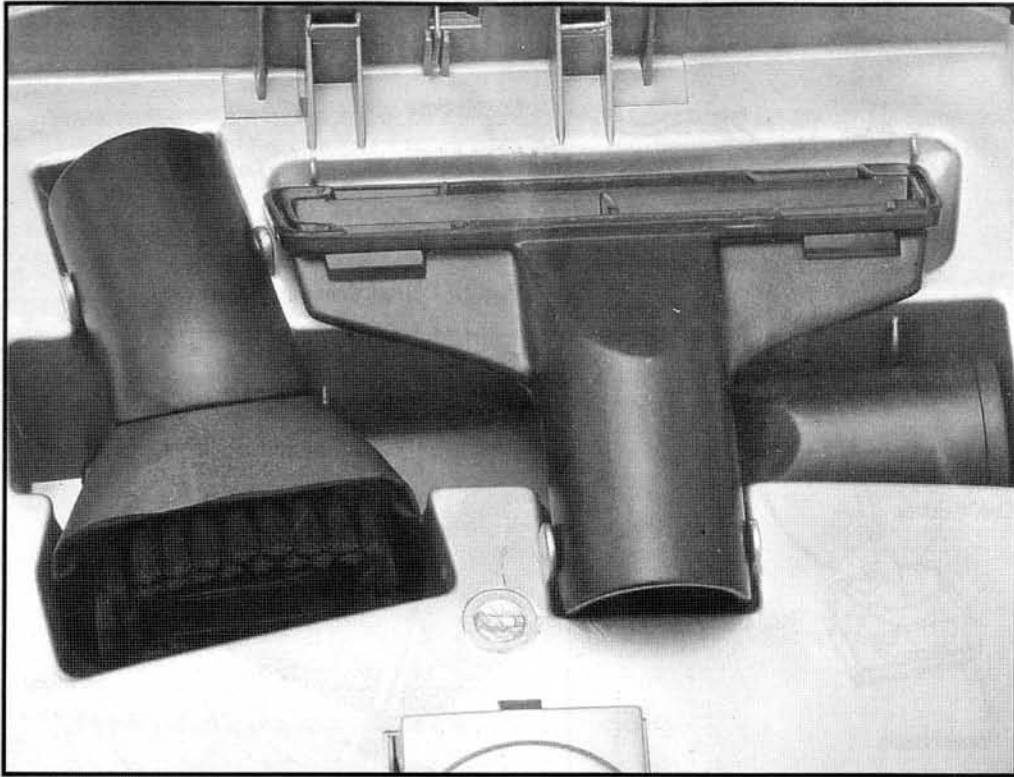

Your vacuum cleaner has been designed to handle a number of cleaning chores, effortlessly and efficiently. Accessories, including a crevice tool, upholstery brush and dusting brush are conveniently located under the accessory cover.



UPHOLSTERY BRUSH

DUSTING BRUSH

CREVICE TOOL

ASSEMBLING YOUR CLEANER


The cleaner should be switched off and disconnected from the mains supply before you start to assemble.



1. Connect the wands to the handle.




4. Connect the hose body connector to the cleaner.

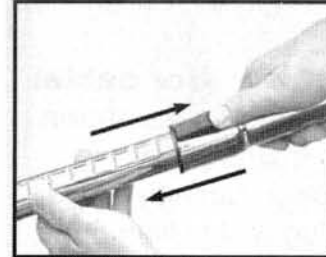

2. Adjusting telescopic wand.





3. Connect the head to the wand.

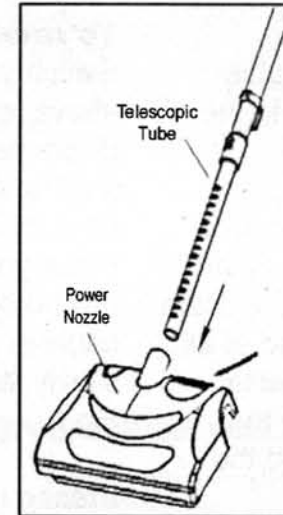

Using Power Nozzle


- Connecting the power nozzle with the telescopic tube:
 - Depress the button on the telescopic tube and insert it into the slot on the power nozzle elbow.
 - Push the telescopic tube down until you hear a "click".
- Insert the power nozzle cord plug into the power socket on the electric hose. Secure the power nozzle power cord to the telescopic tube with the three cord wraps that are provided. To start power nozzle press the On/Off button that is located on the power nozzle.

STORAGE AND PARKING POSITIONS

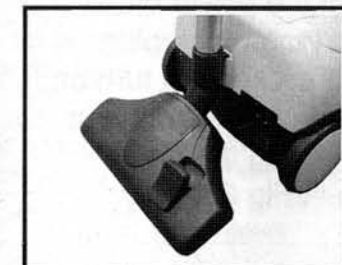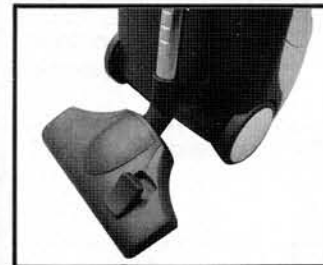


For easy storage, parking and transportation, there is a clip system built into the body to keep the wand, hose and all purpose head in an upright position.

OPERATING YOUR CLEANER

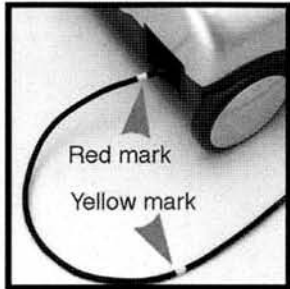

(Fig.1)

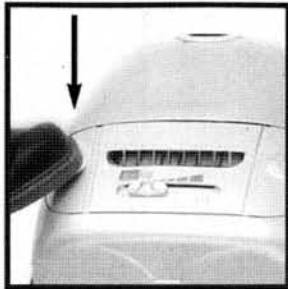

(Fig.2)



(Fig.3)

Warning: There are two markings on the power cable. Gently pull the cable out to the desired length. Fig1.

A **yellow mark** shows the ideal length that the cable should be extended. Never extend the cable beyond the **red mark**, and at all times never pull on the cable when disconnecting from the power supply, always hold the plug.

To Operate your cleaner: Gently pull out the power cable, to the desired length and plug into the mains socket and turn on. You can now start and stop your cleaner by pressing the on/off switch shown in Fig 2. lightly with your toe.

To rewind the power cable: Switch your cleaner off as shown above, switch mains off and disconnect power cable by holding the plug and pulling out from the wall socket. Place your toe on the cable rewind button and by holding the cable in your hand, gently let it slowly feed back into the cleaner Fig 3.


Please make certain that you follow the above directions to avoid injury.

OPERATING YOUR CLEANER



Variable Suction:

Control of suction is at your fingertips. Moving the control forwards increases suction, pulling back on the control reduces suction.

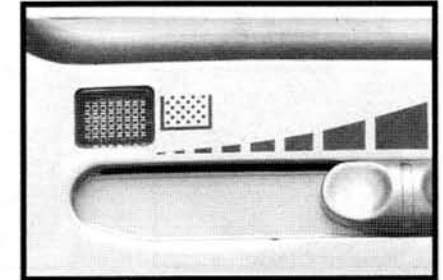

Bag-full Indicator:


If the dust-fill indicator changes to **RED** while you are cleaning, the dust-bag needs replacing. If the Dust-Full indicator continues to display **RED** even after changing, turn the cleaner off, disconnect from mains supply and check to see if the hose, wand or head is blocked.

TROUBLE SHOOTING

PROBLEM	CAUSE	REMEDY
Motor does not start or stops.	No power supply.	Check cable, plug, socket. If still inoperative see service agent.
Suction force is gradually decreasing.	Dust-bag is full, suction hose is blocked or dirty filters.	Replace dust-bag, remove objects from hose, clean or replace filters.
PowerHead does not operate.	Not plugged in to main body, belt broken.	Plug PowerHead into socket, refer to page 9 to replace belt. If still inoperative see service agent.

NOTE: When removing the power cord from the electrical outlet, grasp the plug, not the cord.

CHANGING THE DUST-BAG

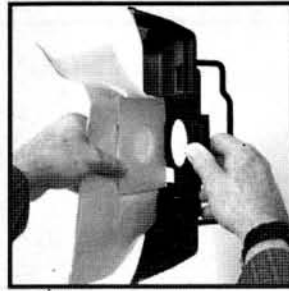

1. Disconnect cleaner from power and remove hose from inlet duct.
2. Remove the bag by firstly lifting up the catch of the dust-bag housing cover to gain access to the dust-bag assembly.
3. Without touching the dust-bag pull the handle up and push the bag release lever. This will allow you to remove the bag.

4. To fit a new dust-bag, push the cardboard support of the new dust-bag into the bag holder until it will go no further and reposition assembly back into the cleaner.
5. Important: Dust-bag and cover must be fitted correctly for proper installation. The cleaner will not operate without a dust-bag fitted.

REPLACEMENT OF THE FILTERS

Your cleaner is fitted with 2 filters for cleaner air.

Dirty filters will restrict motor performance and cleaning efficiency. Never operate without filters fitted.


The Motor filter is located directly behind the dust-bag assembly.

Refer to dust-bag removal instructions and then remove filter by simply pulling up. Refit new filter. The Air Outlet filter is located above the Motor filter. Simply slide out filter cassette assembly and replace with new filter.

Use genuine Filters



BAG OUT TO SHOW FILTERS

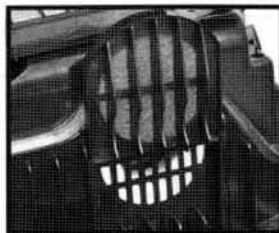

MOTOR FILTER
8



AIR OUTLET FILTER




REPLACING THE POWERNOZZLE BELT

Warning: Before removing the power nozzle belt, make sure you turn the cleaner off and disconnect from the main outlet.

1. The power nozzle belt, over the time, may stretch or break to reduce the power nozzle performance. Turn the power nozzle over, and unscrew the five retaining screws. (Fig. 1) This will allow you remove the bottom plate exposing the belt.
2. You can see the belt on the right side of the roller. Take out the belt, and replace it with new one. (Fig. 2)

3. Fig. 3 shows components after disassembly.

- 1) Power nozzle body
- 2) Belt
- 3) Roller
- 4) Five screws

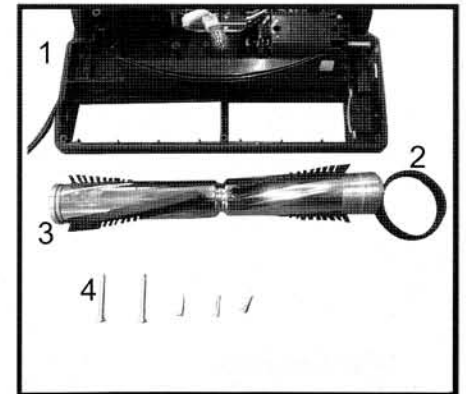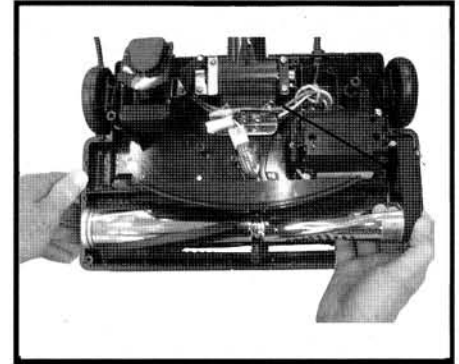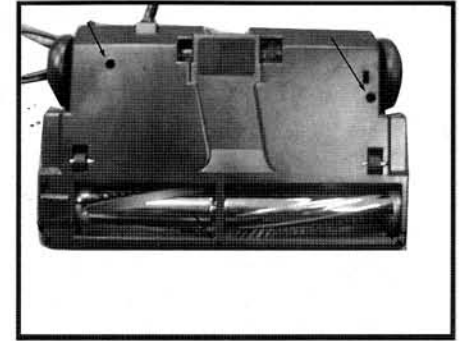

One-year warranty for the machine, and two-year warranty for the motor.